

NLS-HR2180BT 유선 연결



@SETUPE1
Enter Setup



@INTERF3
**** USB HID Keyboard**



@SETUPE0
**** Exit Setup**

NLS-HR2180BT 무선(동글) 연결



@SETUPE1

Enter Setup



@INTERF19

****Bluetooth Dongle KBW
(Only Bluetooth Dongle Supported)**



@SETUPE0

**** Exit Setup**